


PROSLIDER

POLISHED AND SATIN FINISH
STAINLESS STEEL AISI 304/1.4301-V2A

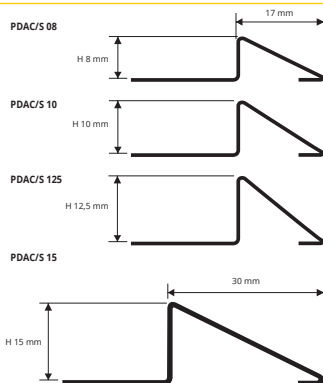

POLISHED STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack 20 Pcs - 54 lm - 10/10 mm

Article	H mm		
PDAC 08	8		
PDAC 10	10		
PDAC 125	12,5		
PDAC 15	15		



SATIN FINISH STAINLESS ST. AISI 304/1.4301-V2A with protective film
bar length 2,7 lm - pack 20 Pcs - 54 lm - 10/10 mm

Article	H mm		
PDACS 08	8		
PDACS 10	10		
PDACS 125	12,5		
PDACS 15	15		

SUITABLE FOR USE IN CONTACT WITH FOODSTUFFS.

EXAMPLES AND INSTRUCTIONS FOR LAYING METHODS





1. Choose the profile with the required height and finish. 2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application. 3. Lay the "PROSLIDER". 4. Align it "flush" with the floor/covering. 5. Use the adhesive to seal any empty interstices.

COLOURS



PROSLIDER

POLISHED AND NATURAL BRASS

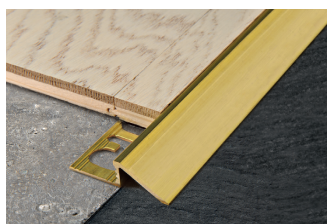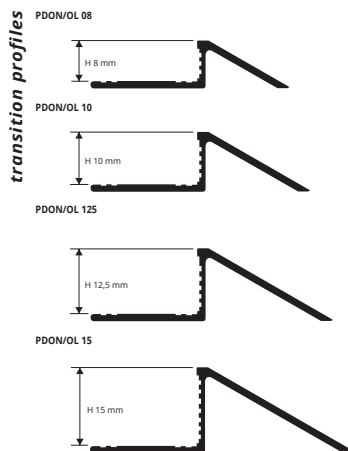

NATURAL BRASS thermo packed 5 Pcs
bar length 2,7 lm - pack 20 Pcs - 54 lm

Article	H mm		
PDON 08	8		
PDON 10	10		
PDON 125	12,5		
PDON 15	15		




POLISHED BRASS thermo packed
bar length 2,7 lm - pack 20 Pcs - 54 lm

Article	H mm		
PDOL 08	8		
PDOL 10	10		
PDOL 125	12,5		
PDOL 15	15		


INSTRUCTIONS FOR LAYING

1. Choose the profile with the required height H, material and finish. 2. Fill the profile cavity with adhesive and apply the adhesive onto the area of application. 3. Lay the "PROSLIDER". 4. Align it "flush" with the floor/covering. 5. Use the adhesive to seal any empty interstices. Oxidation marks on profiles in natural and polished brass may be easily removed by polishing the profiles with specific products to be found on sale such as Sidol, Smac and similar.

COLOURS



EXAMPLES OF LAYING



* = On demand, price and delivery time to be agreed.